




# Strikes

Models 10-055, 10-081, 10-094

Jamb Type: Wood  
 Style: Square Corner, Deadbolt  
 Standard for: B500, B600/700/800-Series | B280-Series | B/BA300-Series | BC100-Series | BE-Series | BR260-Series  
 Optional for: S200 Series

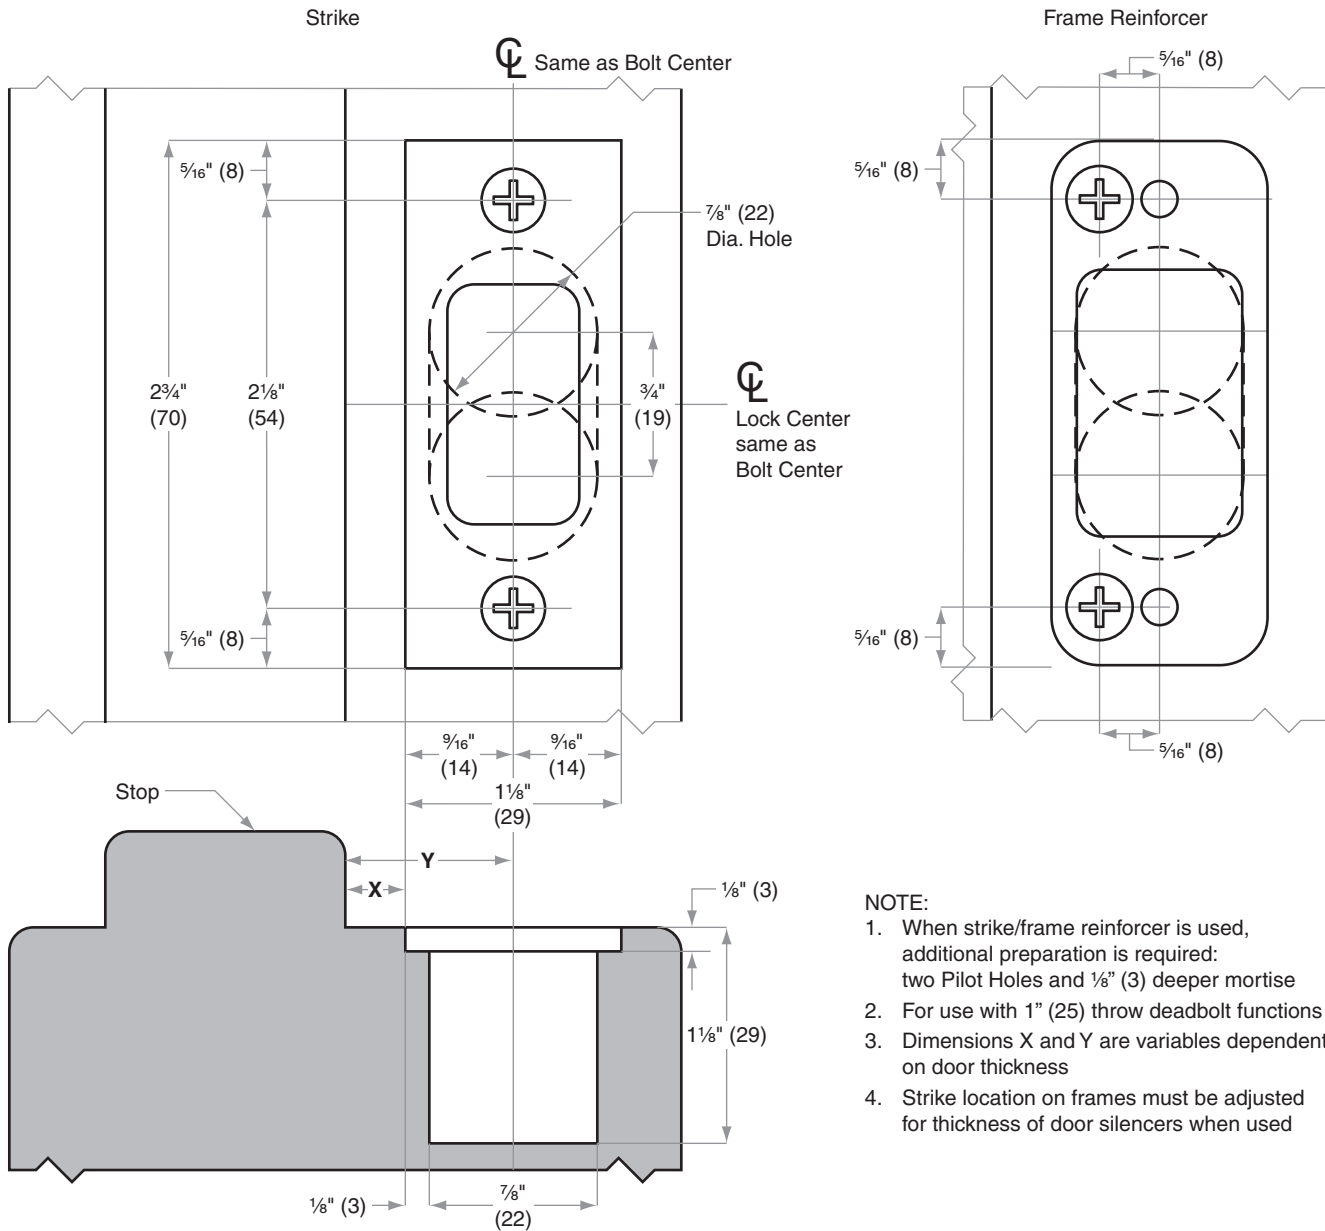

**NOTE:**

1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and  $\frac{1}{8}$ " (3) deeper mortise
2. For use with 1" (25) throw deadbolt functions
3. Dimensions X and Y are variables dependent on door thickness
4. Strike location on frames must be adjusted for thickness of door silencers when used

Dimensions shown in parentheses ( ) are in millimeters.

Door preparation template